

FIG. 1

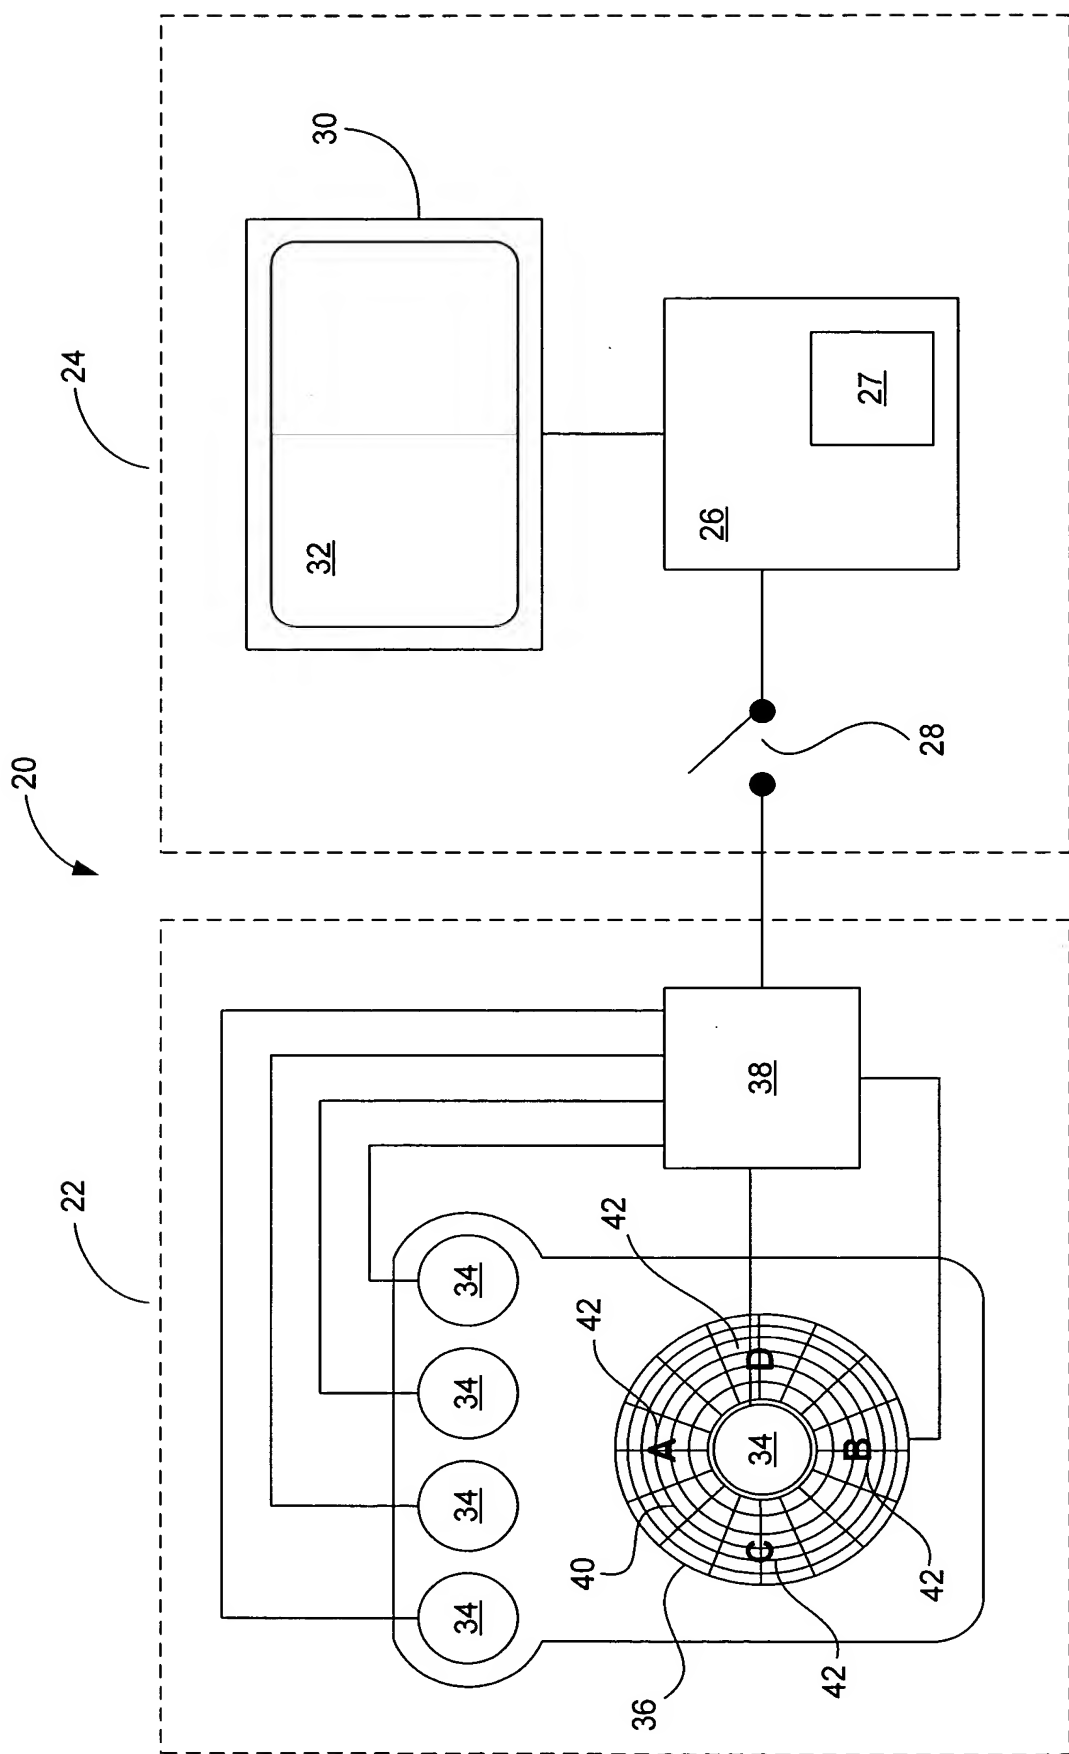 


FIG. 2

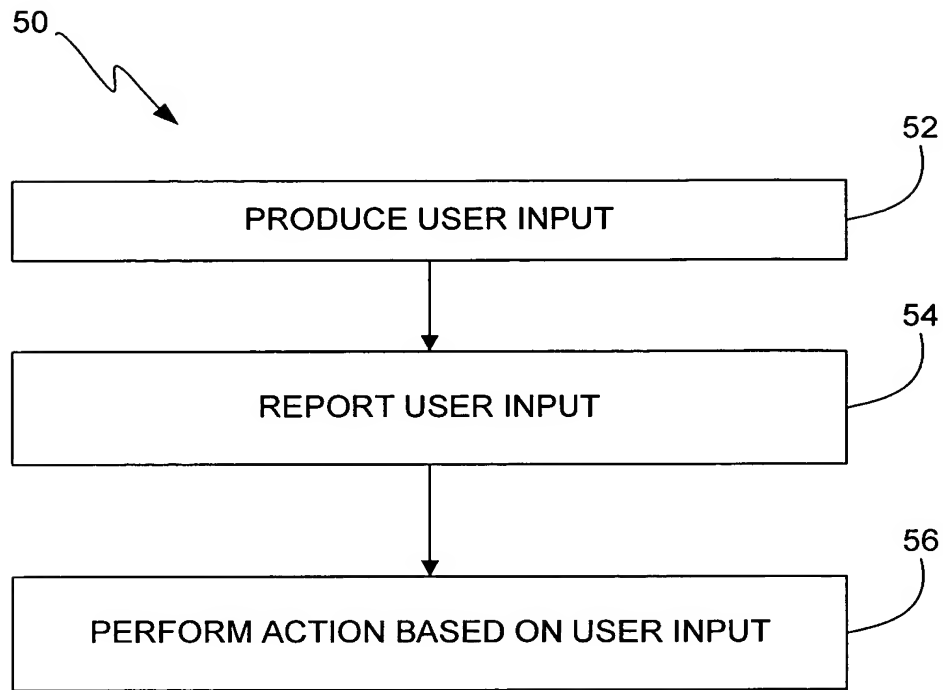 


FIG. 3

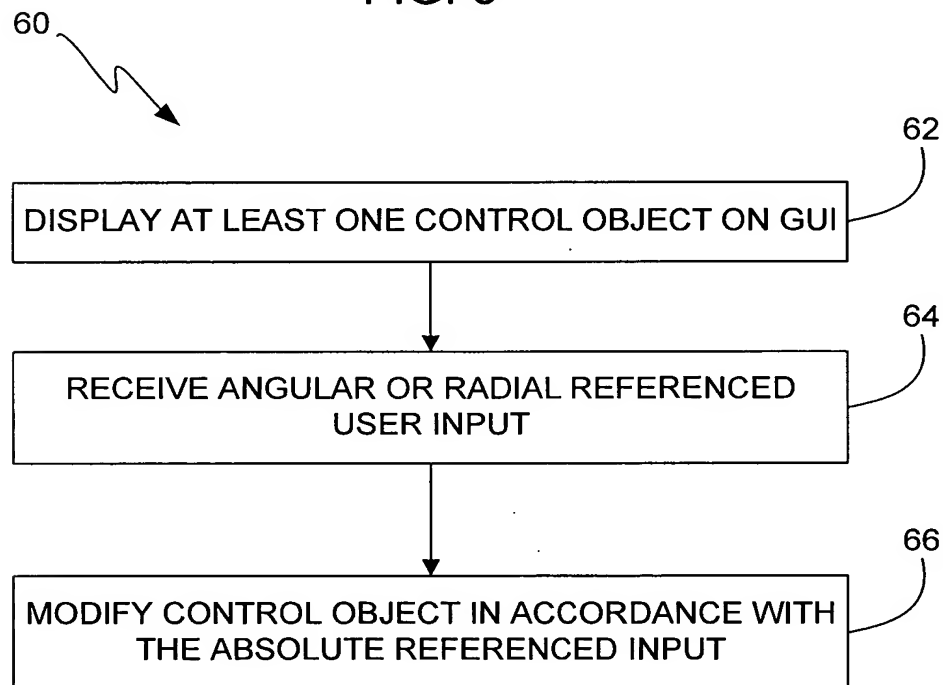 


FIG. 4

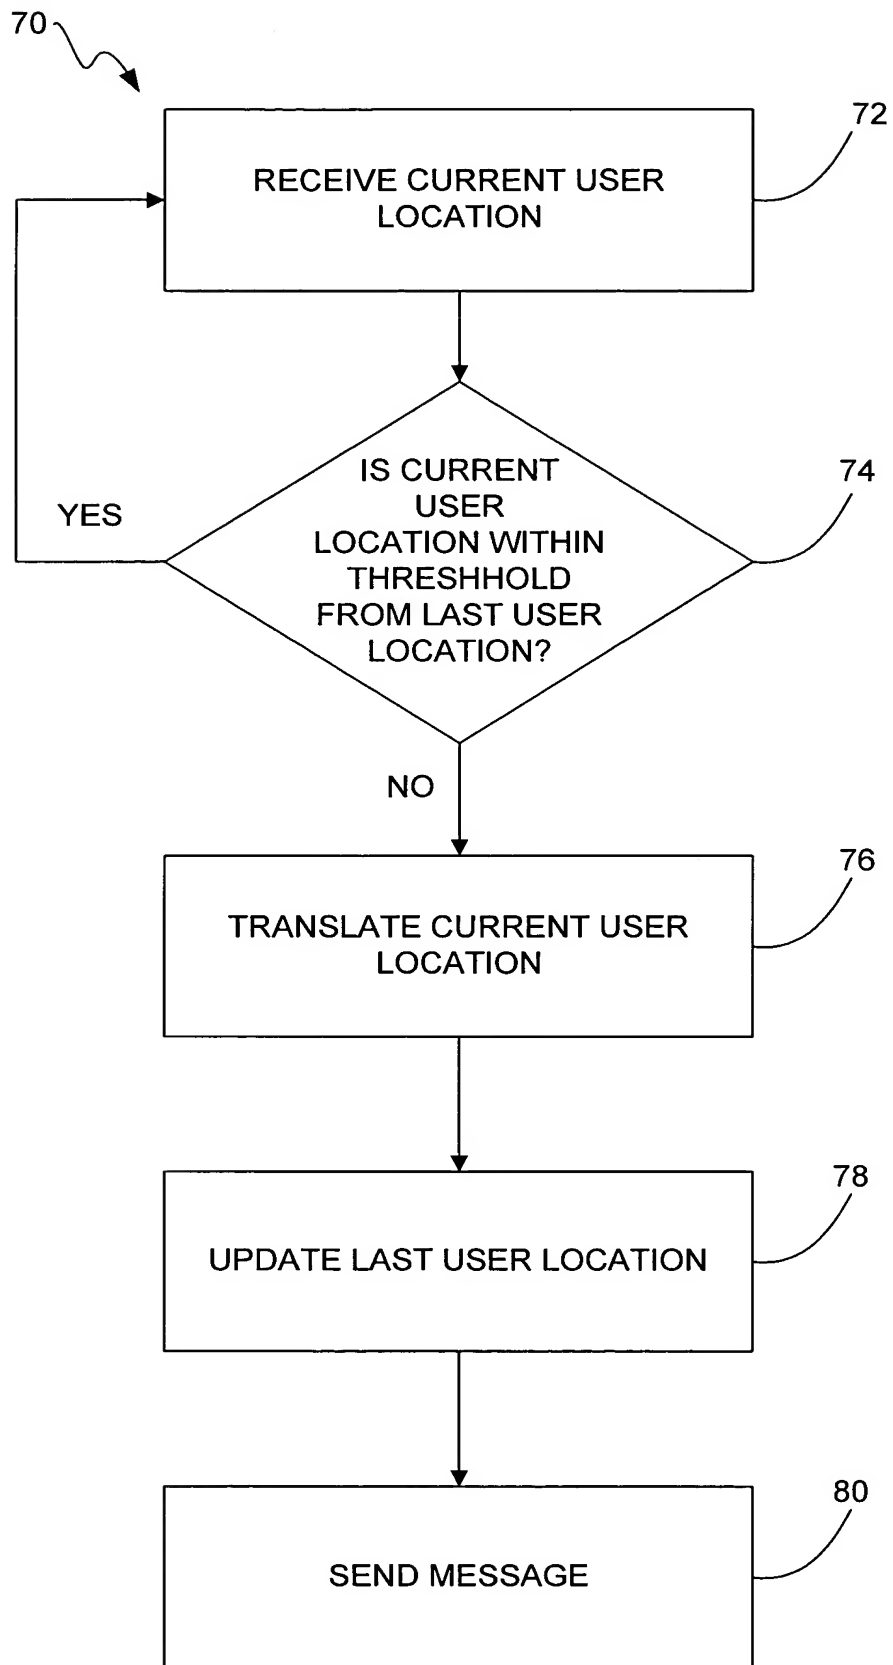 


FIG. 5

82

ACTIVE signal state	TOUCH PAD ASSEMBLY RESPONSE
LOW to HIGH	SEND BUTTON STATE AND TOUCH PAD POSITION
HIGH	SEND BUTTON STATE AND/OR TOUCH PAD POSITION ON CHANGE
LOW to HIGH	DON'T SEND MESSAGES EVEN IF STATE CHANGES
LOW	DON'T SEND MESSAGES EVEN IF STATE CHANGES

FIG. 6

86

EVENT	EVENT TYPE (E0)	EVENT VALUE (D0-D6)						
PAD POSITION CHANGE	1	ABSOLUTE POSITION						
BUTTON STATE CHANGE 0- TOUCHED 1- UNTOUCHED	0	D6 Res. (1)	D5 Pad	D4 Prev.	D3 Next	D2 Play/ Pause	D1 Menu	D0 Select

FIG. 7

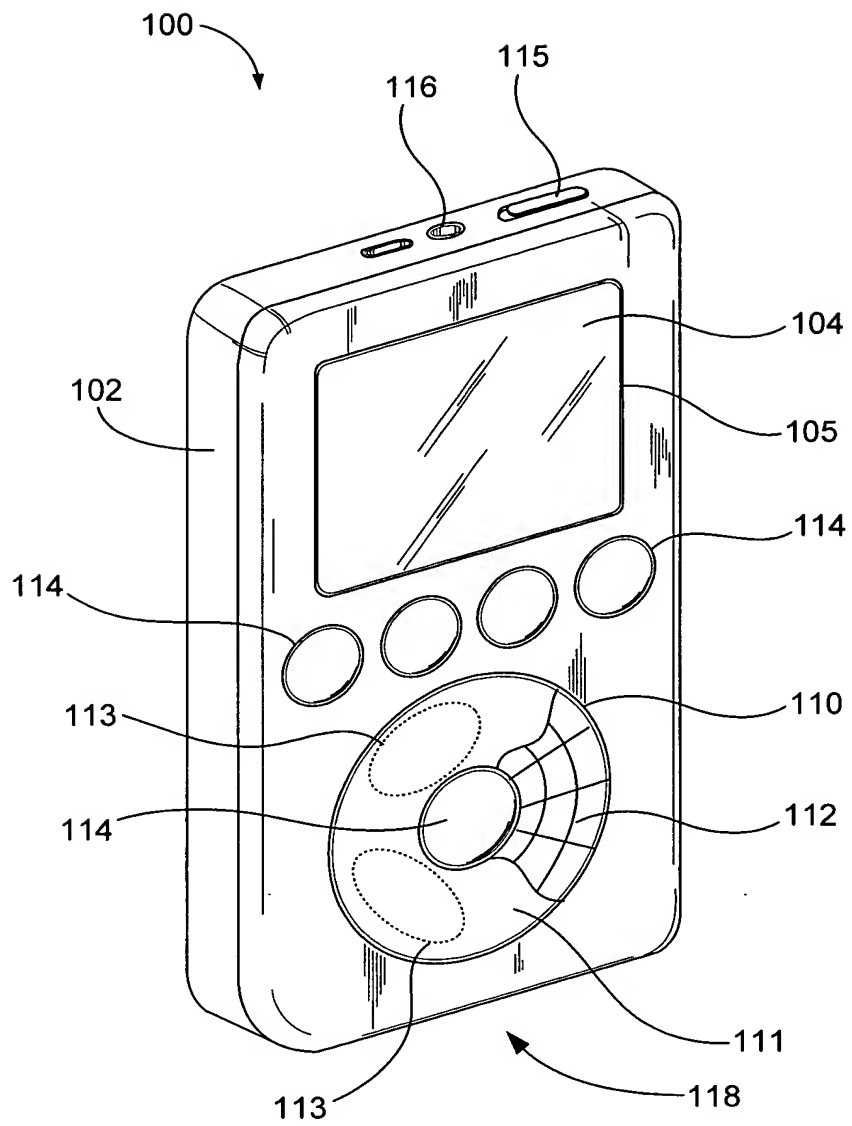 


FIG. 8

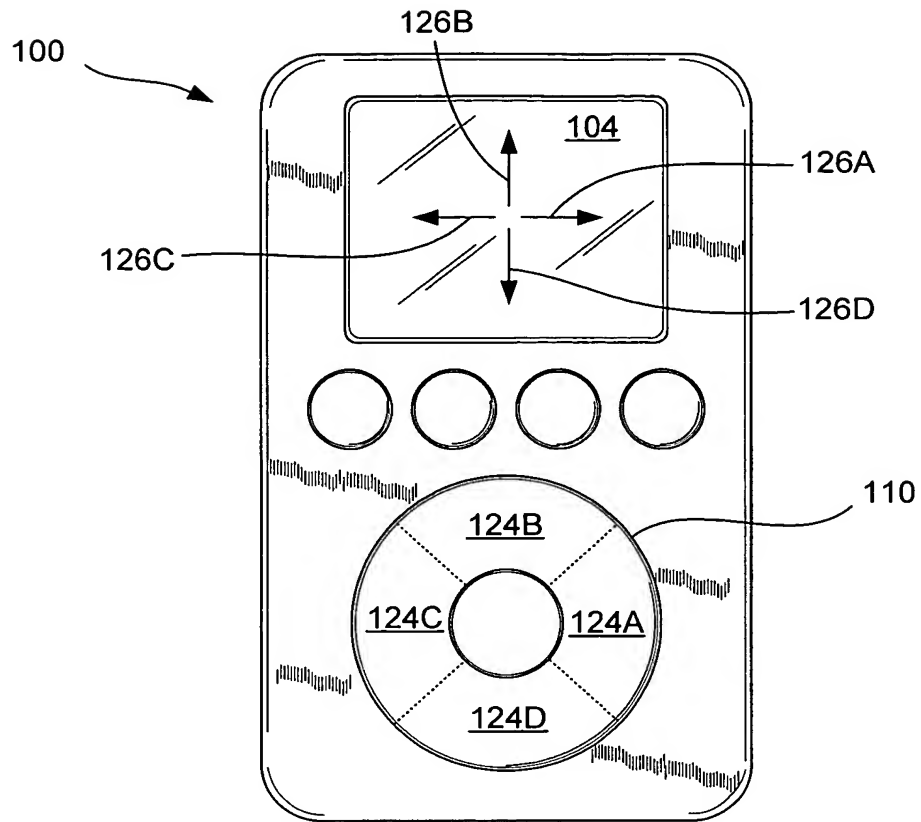 


FIG. 9

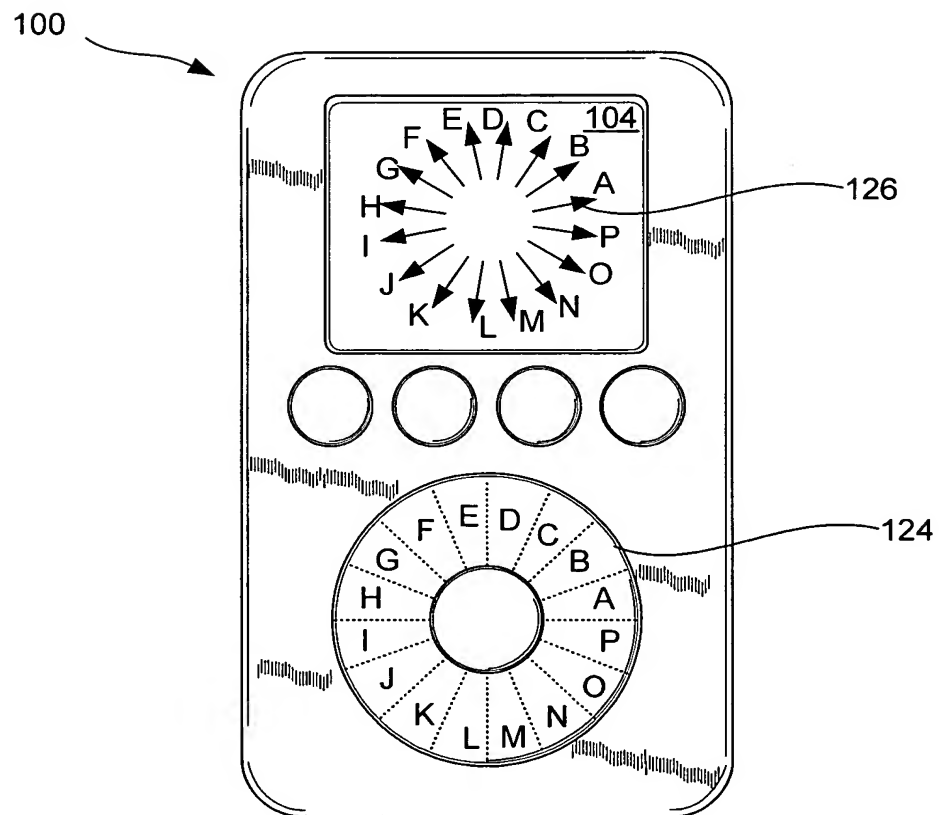 


FIG. 10

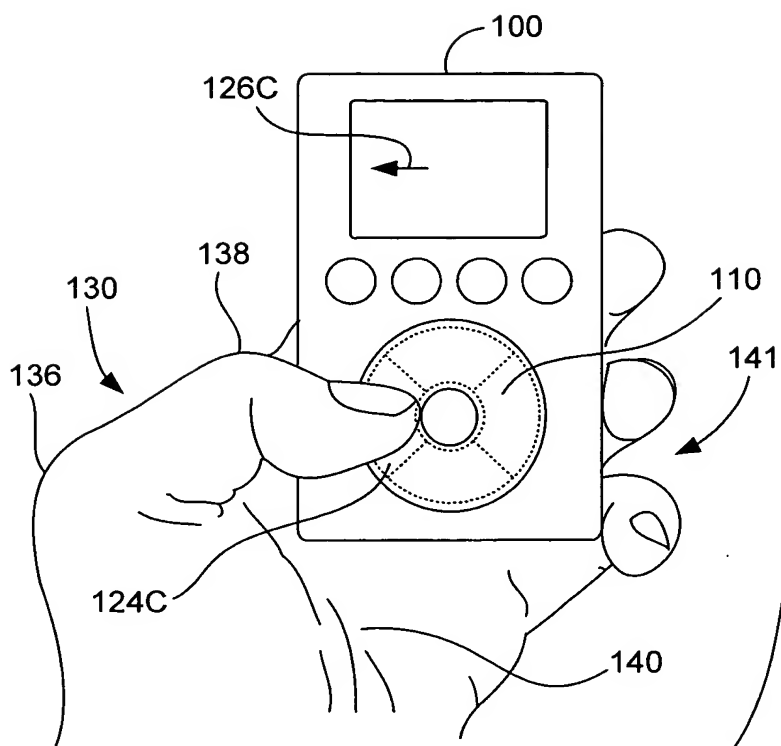 


FIG. 11A

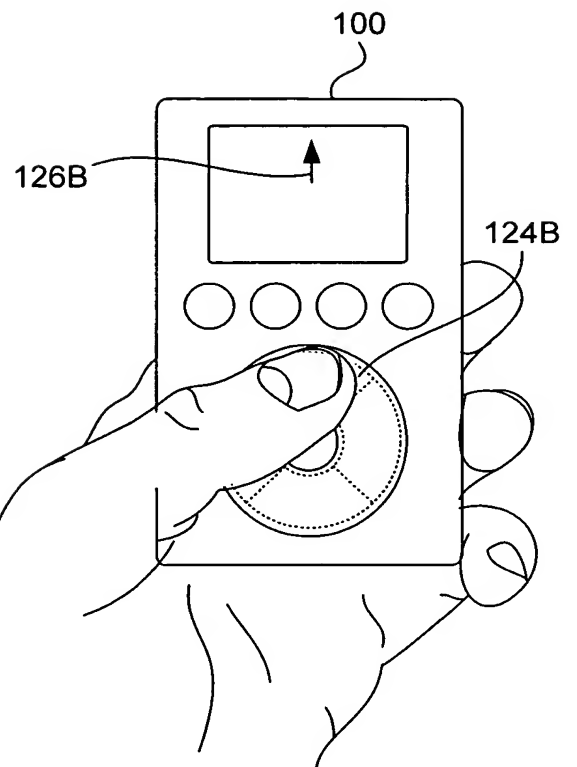 


FIG. 11B

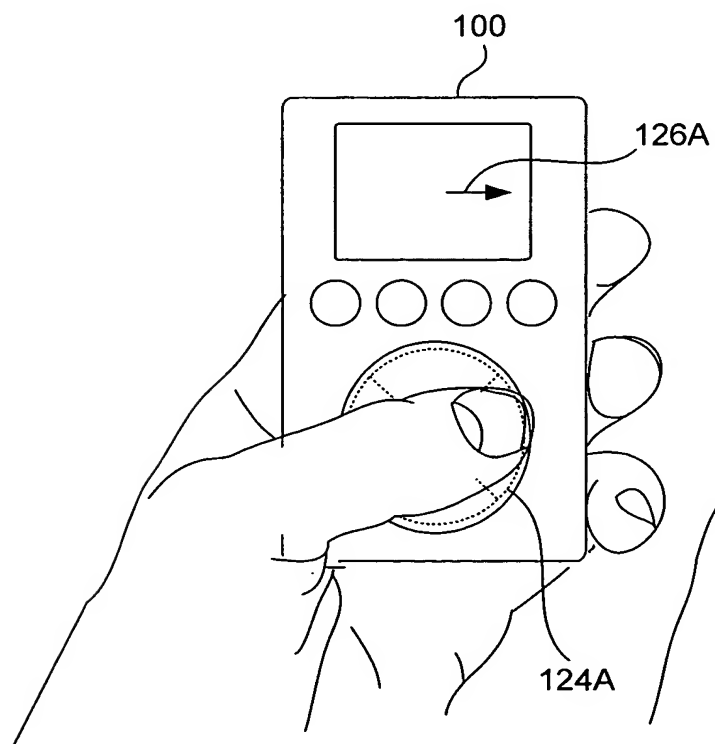 


FIG. 11C

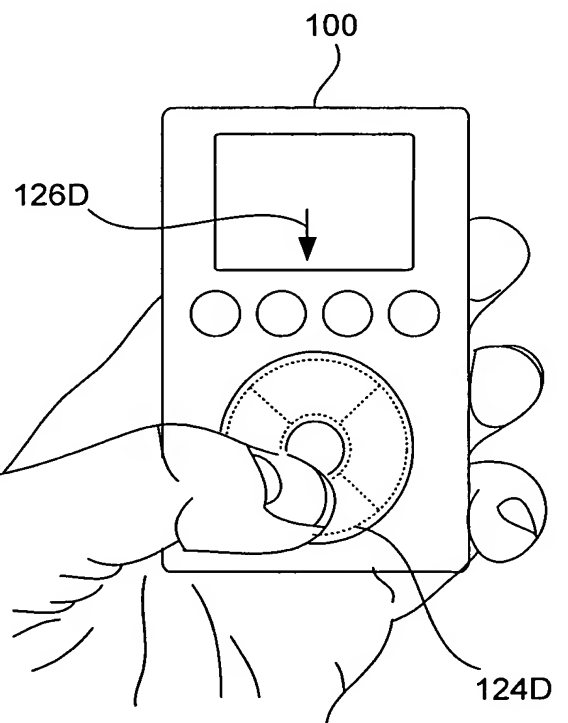 


FIG. 11D

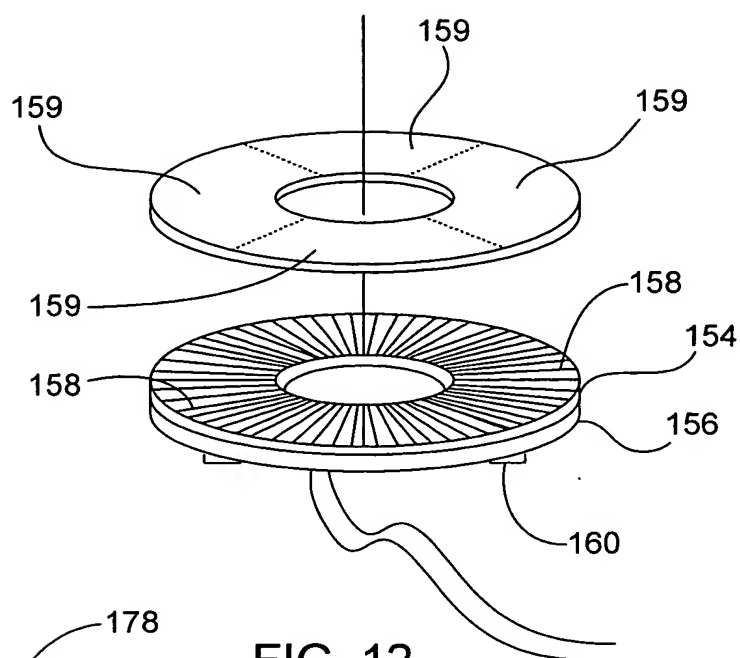 


FIG. 12

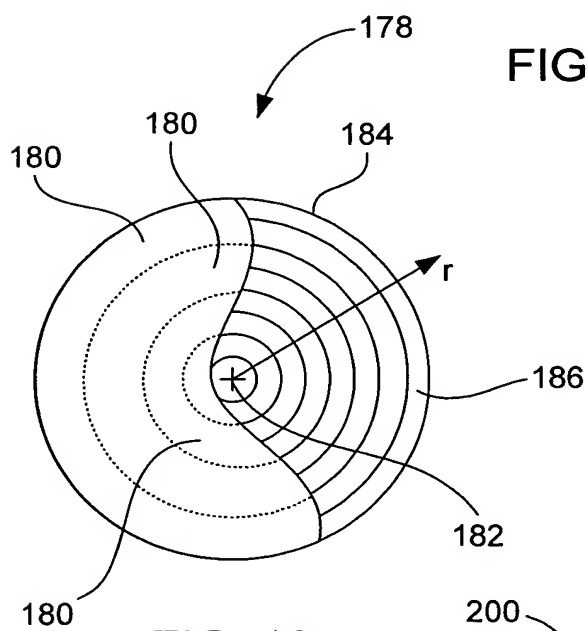 


FIG. 13

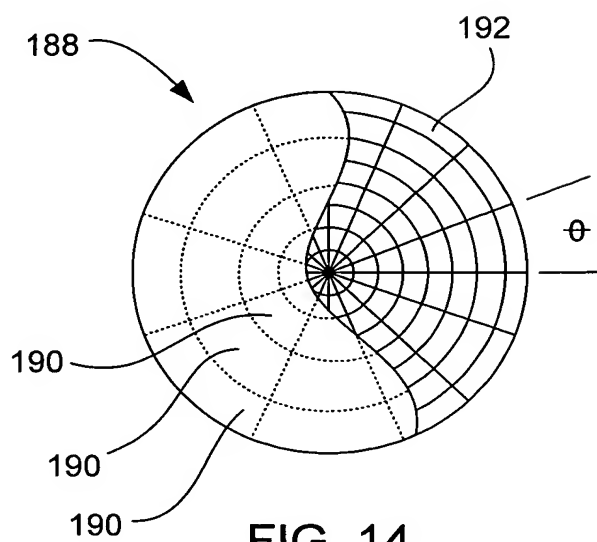 


FIG. 14

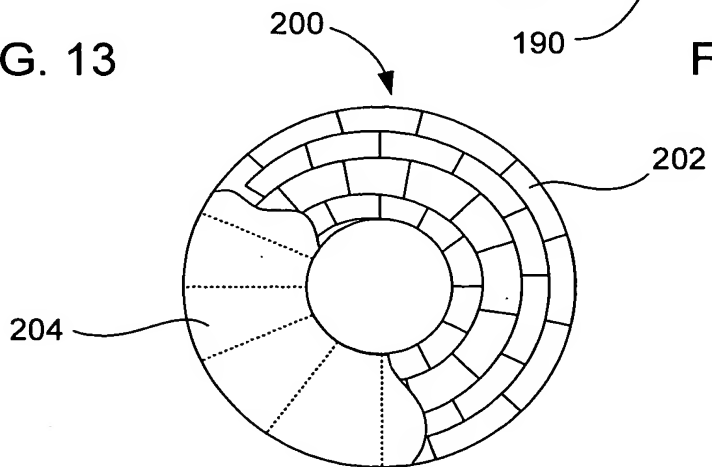 


FIG. 15